

ARGUS PRI Manual

Version: 2.10 / EN

Important Notice:

The basic ARGUS package includes support for at least one DSL interface (ADSL, VDSL or SHDSL) or the PRI interface with a variety of functions and tests for the interface(s). Support for other interfaces and functions is optional (see the options in the data sheet). Consequently, depending on the scope of the functions delivered, certain menu items may be hidden.

© **by intec Gesellschaft für Informationstechnik mbH**
D-58507 Lüdenscheid, Germany, 2013

Alle Rechte, auch der Übersetzung, sind vorbehalten. Kein Teil des Werkes darf in irgendeiner Form (Druck, Fotokopie, Mikrofilm oder einem anderen Verfahren) ohne schriftliche Genehmigung reproduziert, vervielfältigt oder verbreitet werden.

All rights are reserved. No portion of this document may be reproduced, duplicated or distributed in any form (print, copies, microfilm or on any other media) without intec's written permission.

1	Introduction	5
2	Connection for a PRI network	7
2.1	Pin Assignment on the ARGUS (BRI/PRI/E1)	7
3	Operation on a PRI Access	8
3.1	Configuring the PRI Interface and Access Mode Settings	8
	3.1.1 TE Simulation of a Primary Rate Interface	10
	3.1.2 NT Simulation of a Primary Rate Interface	10
3.2	Initialization Phase including B-Channel Test	10
3.3	Configuring the PRI Parameters	12
3.4	Bit error rate Test	17
	3.4.1 Setting the BERT Parameters	18
	3.4.2 BERT start	20
	3.4.3 BERT saving	24
	3.4.4 BERT wait	25
	3.4.5 B-channel loop	26
3.5	Supplementary Services Test	27
	3.5.1 Supplementary Services on DSS1	27
	3.5.2 Error Messages	28
3.6	Service Tests	28
3.7	X.31 Test	29
	3.7.1 Setting the X.31 Parameters	29
	3.7.2 Automatic X.31 Test	33
	3.7.3 Manual X.31 Test	35
3.8	Connection display	37
3.9	Clear down (disconnect) the connection	43
3.10	Connection setup time	45
3.11	The L1 Status of a PRI Access	46
3.12	Monitor	49
3.13	Leased line on a PRI access	52
	3.13.1 Telephony	52
	3.13.2 Bit error rate Test	53
	3.13.3 Configuration: BERT	55
	3.13.4 Loopbox	58
3.14	Managing Multiple Tests on a PRI Access	59
	3.14.1 Starting Several Tests to Run Simultaneously	60
	3.14.2 Switching between Parallel Tests or Connections	62
	3.14.3 End All Currently Running Tests or Connections	63
4	Appendix	64
A)	Acronyms	64
B)	Index	67

1 Introduction

When fully equipped, the ARGUS supports a comprehensive range of test functions for not only BRI accesses and POTS, but also for U-interface, E1/PRI, ADSL, VDSL, SHDSL and Ethernet accesses. This manual covers the optional E1/PRI interface.

In addition to TE/NT simulation on a PRI interface, the ARGUS also supports D-channel monitoring on PRI accesses.

Furthermore, it supports tests of digital leased lines including bit error rate tests (BERT) in the D-channel. The MegaBERT expands the bandwidth to 2 Mbit/s - to either 2048 kbit/s (framed) or 1984 kbit/s in time slots 1-31 (2 Mbit unframed). Last but not least, the ARGUS can run a BERT to a remote loopbox or perform an end-to-end measurement to another ARGUS.

An overview of some important ARGUS functions:

PRI Functions

- **Bit Error Rate Test (BERT) for E1/PRI in accordance with ITU-T G.821**
Performs a BERT in an extended call to itself, via a loopbox or in end-to-end operation. The ARGUS will, if needed, handle the loopbox function itself. The optional MegaBERT extends the bit error test on E1/PRI accesses to a full 2 Mbit/s bandwidth.

- **Leased Line Tests – tests permanent circuits with BERT and speech**

- **NT Simulation of a Primary Rate Interface**

- **D-channel monitoring on the Primary Rate Interface**
All of the D-channel signals are captured and passed to the USB interface. When passively monitoring, the ARGUS does not affect Layer 1.

- **Test of Layer 1**

Should you have any further questions, please contact us:

intec Gesellschaft für Informationstechnik mbH
Rahmedestr. 90
D-58507 Lüdenscheid
Tel.: +49 (0) 2351 / 9070-0
Fax: +49 (0) 2351 / 9070-70
www.argus.info/en
support@argus.info


2 Connection for a PRI network

Since there is no commonly accepted standard for the connections in the 2 Mbit sector, you will be confronted with different forms of connectors depending on the type of terminal and the network termination used.

The ARGUS changes the connector pin assignments automatically in accordance with the mode, TE or NT. Additionally, it is also possible to change the pin assignments manually in the L1-Status menu.

2.1 Pin Assignment on the ARGUS (BRI/PRI/E1)

In TE mode, the ARGUS sends on lines 4 and 5, in NT-Mode on 1 and 2 (see illustration). An adapter cable, which is suitable for the PRI network/system to be tested, can be connected using the RJ45-RJ45 adapter.


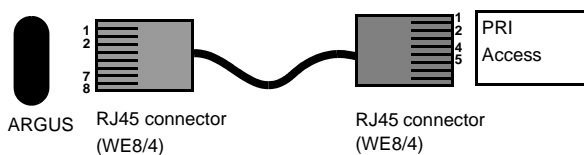


PIN	PIN	Function	
		NT	TE
1	1	Tx	Rx
8	2	Tx	Rx
2	4	Rx	Tx
7	5	Rx	Tx

3 Operation on a PRI Access

3.1 Configuring the PRI Interface and Access Mode Settings

Use the included connection cable to connect the ARGUS "BRI/PRI/EI" jack to the access to be tested and then switch the ARGUS on. Which initial display is now shown will depend on which access setting was made last on this ARGUS (in the example, ADSL and PRI accesses):

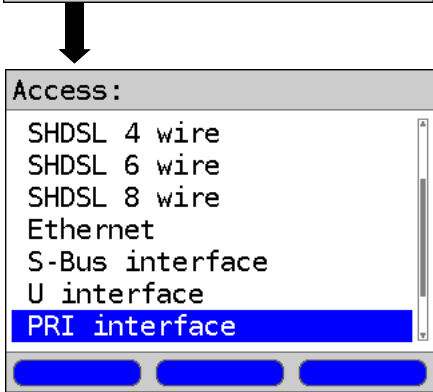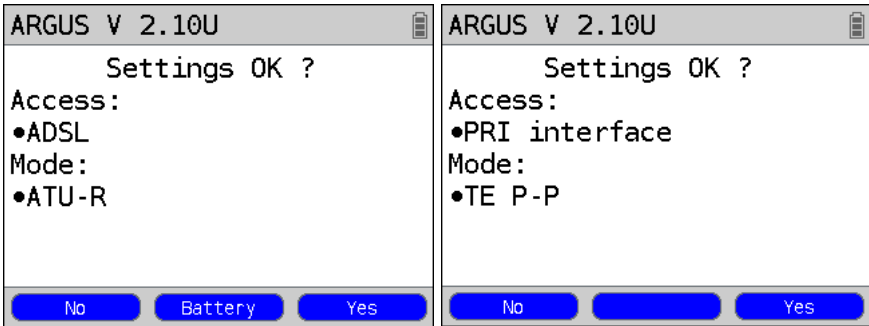

The Access Menu:




Select a type of access; the selected type will be marked in blue (in the example, PRI interface).



The ARGUS will set the type of access to the one marked blue PRI interface. The Access mode menu will open.

Continuation on next page

Continuation on next page

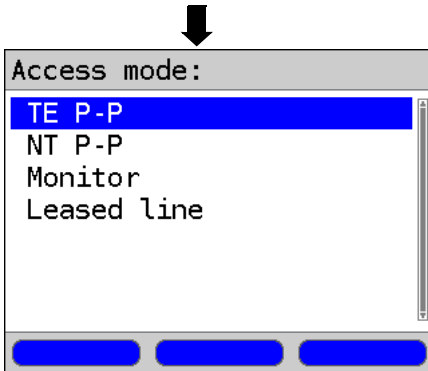

Access Mode Menu:




Select an Access mode; the selected mode will be marked in blue (in this example, TE P-P).

ARGUS State display



The ARGUS will use the marked access mode (in this example, TE P-P). The ARGUS starts the initialization phase and then opens the State display.

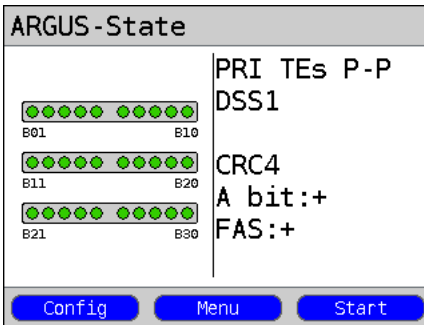

<Start> Start the B-channel test


<Config> Open the "PRI Setting" menu.



Open L1 state

<X> Switch the pin assignment (will not be displayed until the Level key is pressed)

Main menu

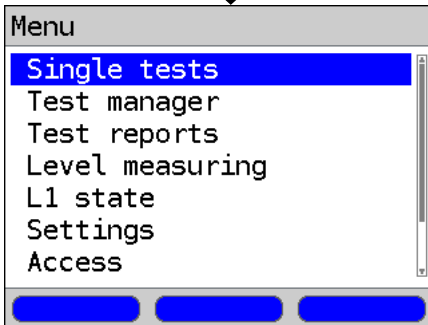

The menus, which are available for the type of access under test, are listed in the main menu.



The ARGUS will open the marked menu (in this example, Single tests).



Select a menu. The selected menu will be marked blue in the display.



To return to the previous menu (in the example, the State display).

3.1.1 TE Simulation of a Primary Rate Interface

In the Access mode menu (see page 8), select the desired simulation mode:

- **TE P-P (point-to-point)**

Afterwards, the access and the protocol stack will be initialized in accordance with the selected setting.

3.1.2 NT Simulation of a Primary Rate Interface

In the Access mode menu (see page 8), select the desired simulation mode:

- **NT P-P (point-to-point)**

Afterwards, the access and the protocol stack will be initialized in accordance with the selected setting.


3.2 Initialization Phase including B-Channel Test

Initialization on a PRI network

As soon as Layer 1 is setup, the "L1 Sync" LED will light continuously. The ARGUS will automatically determine and display, whether or not the PRI access uses CRC4-monitoring. CRC4 monitoring can be switched on or off manually.

The ARGUS will begin to automatically determine the access configuration. After Layer 2 is setup, the "L2" LED will also light.


The ARGUS will, regardless of the mode of operation (TE or NT mode), determine the D-channel protocol and attempt to setup Layer 3.

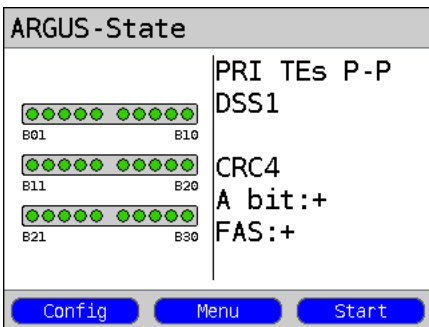

During this phase, the ARGUS displays the A bit of the remote side and the FAS. The protocol can only be determined when the A bit is not set (+). The FAS (Frame Alignment Signal) indicates whether the ARGUS could correctly synchronize with the incoming 2 Mbit data stream's alternating frame identification word or message word and the, perhaps present, CRC4-superframe structure.

Press the <start> softkey to have the ARGUS begin to test the availability of all 30 B-channels one after the other by occupying the B-channels.. If the ARGUS can place a call on a B-channel, it will be assumed that the B-channel is available in both directions; the B-channel test cannot distinguish between alternating and exclusively "outgoing" B-channels. If the connection is rejected, the B-channel will be identified as unavailable. In the case of a cause, which indicates that the B-channel is occupied, the connection will be tried up to two times and, if a connection can still not be setup, it will then be marked as unavailable.

**Example:
The status display on a PRI access**

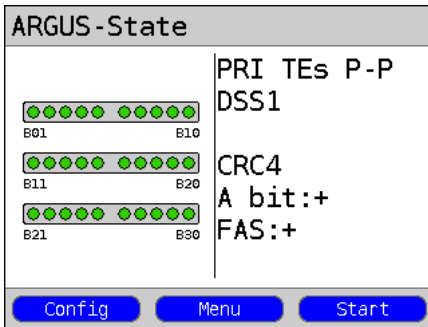


The ARGUS will display the following:

- Type of access
- Access Mode
- Bus configuration
- D-channel protocol

- The availability of the B-channels
Available B-channels: green circle
is indicated by three rows
of red or green circles.

B-channel 1 is at the upper left
B-channel 30 is at the lower right
In the example, all 30 B-channels are available and can be used for outgoing or alternating connections.
- CRC4-monitoring, A-Bit, FAS

B-channel test – example:

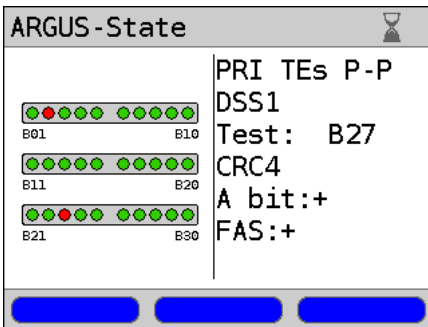

The ARGUS is in TE-Simulation Slave mode.
B-channel 2 and 23 are not available or are busy. This state is indicated in the display by the red circles. Green circles are used to indicate the available B-channels.

If the ARGUS is not properly connected (e.g. incorrect cabling) or the network is not in order, the ARGUS will display "No Net".

3.3 Configuring the PRI Parameters

The following PRI parameters can be configured as needed. The procedure for configuring a parameter will be illustrated with a single example: It is possible to restore the default settings for the parameters (see the ARGUS main Manual).

Configuration



Protocol



● **Automatic**



The ARGUS will use the marked setting as the default and return to the next higher menu.

The ARGUS - Main menu


Use the cursor keys to select, e.g. Protocol.




Mark the desired protocol. The selected protocol will be marked in blue (in this example, Automatic). The default protocol will be marked in the display by a ●. The ARGUS will use the default protocol for the PRI connection.



Open the next higher menu without making any changes. The ARGUS will continue to use the default setting.

Setting	Explanation
Protocol	<p>Instead of allowing the ARGUS to automatically determine the protocol (setting: Automatic), it is also possible to manually set the Layer-3 D-channel protocol. The ARGUS will save the protocol setting permanently, i.e. it will use this protocol the next time that it is switched on.</p> <p>Default setting: Automatic</p>
Alerting mode	<p>You can specify whether, for an incoming call on a PRI point-to-point access, the ARGUS should display only the access number without extension or the complete number with extension. If it is set to "Manual", the ARGUS will display the extension (an incoming call will be signaled. The ARGUS will send the Layer 3 message "Alert" when it accepts the call. The digits of the extension that have been sent by this point will be displayed.).</p> <p> With the Manual setting, an incoming call must be answered within 20 seconds or it will be lost. Furthermore, you should note that the remote subscriber will not hear a ringing tone.</p> <p>If it is set to "Automatically", the ARGUS will only display the access number without extension or, depending on the configuration of the access in the exchange, it may not display the number called at all.</p> <p>Default setting: Automatic</p>
Clock mode	<p>This parameter sets where the clock will be generated in the case of a BRI or PRI access. You can either specify that the ARGUS generates the clock (is Master) or that it is the slave of a clock generated at the other end (Slave).</p> <p>Default setting:</p> <p>NT mode Master</p> <p>TE mode Slave</p> <p>Leased line Slave</p> <p>This setting will not be saved permanently, rather only applies for the current measurement.</p>

<p>PRI termination</p>	<p>Depending on the transmission technique (75 Ohm coaxial-cable or twisted-pair cable with an impedance of 120 Ohms) used, the PRI termination resistor must be selected accordingly.</p> <p>The default setting is country-specific and corresponds to the system most common in the respective country: Germany, Austria, England, the Netherlands, France: 120 Ohm</p> <p>Spain, Italy, Greece: 75 Ohm</p>												
<p>PRI haul mode</p>	<p>The ARGUS can set the sensitivity on a PRI access.</p> <p>By default, "short haul" will be suggested.</p> <p>short haul: Normal sensitivity, i.e. signal reception with cable attenuation of up to ca. -10 dB.</p> <p>long haul: Increased sensitivity, i.e. signal reception with cable attenuation of up to ca. -35 dB. This corresponds to a distance of 1600 m with 22 AWG twisted pair cable.</p> <p>When using greater sensitivity ("long haul" mode) on longer lines, feedback on the line can cause faulty synchronisation.</p>												
<p>Sa5 bits</p>	<p>The ARGUS can set the Sa5 bits on a PRI access. By default, the Sa5 bits are set to 0000.</p> <p> The Sa5 bits have no significance between an NTPM and a PBX system.</p> <p>This setting will not be saved permanently, rather only applies for the current measurement.</p> <table data-bbox="353 1145 938 1246"> <thead> <tr> <th>Sa5 coding</th> <th>Meaning</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>0000</td> <td>Network -> Terminal</td> <td>Terminal -> Network</td> </tr> <tr> <td>1111</td> <td>Direction code</td> <td>Ack. for loop command</td> </tr> <tr> <td></td> <td>-----</td> <td>Direction code</td> </tr> </tbody> </table>	Sa5 coding	Meaning	Meaning	0000	Network -> Terminal	Terminal -> Network	1111	Direction code	Ack. for loop command		-----	Direction code
Sa5 coding	Meaning	Meaning											
0000	Network -> Terminal	Terminal -> Network											
1111	Direction code	Ack. for loop command											
	-----	Direction code											

<p>Sa6 bits</p>	<p>The ARGUS can set the Sa6 bits on a PRI access. By default, they are set to 0000. This setting will not be saved permanently</p> <table border="0"> <thead> <tr> <th data-bbox="362 264 456 284">Sa6 coding</th> <th data-bbox="490 264 564 284">Meaning</th> <th data-bbox="754 264 826 284">Meaning</th> </tr> </thead> <tbody> <tr> <td data-bbox="362 320 404 339">0000</td> <td data-bbox="490 320 717 395">Network -> Terminal Setting for normal operation (default)</td> <td data-bbox="754 320 945 395">Terminal -> Network Setting for normal operation, idle (default)</td> </tr> <tr> <td data-bbox="362 400 404 419">1010</td> <td colspan="2" data-bbox="490 427 897 667"> Switches a loop in the NTPM. In the permanent circuit mode, a BERT can then be performed using the loop setup there. Important: The ARGUS must be set to "Leased line" even if it is a dialup access! </td> </tr> <tr> <td data-bbox="362 775 398 794">1111</td> <td data-bbox="490 695 717 930"> Switches a loop in the LEPM. In the permanent circuit mode, a BERT can then be performed using the loop setup there. Important: The ARGUS must be set to "Leased line" even if it is a dialup access. </td> <td data-bbox="754 802 992 850"> AIS on U₂ (incoming side) of the NTPM </td> </tr> </tbody> </table>	Sa6 coding	Meaning	Meaning	0000	Network -> Terminal Setting for normal operation (default)	Terminal -> Network Setting for normal operation, idle (default)	1010	Switches a loop in the NTPM. In the permanent circuit mode, a BERT can then be performed using the loop setup there. Important: The ARGUS must be set to "Leased line" even if it is a dialup access!		1111	Switches a loop in the LEPM. In the permanent circuit mode, a BERT can then be performed using the loop setup there. Important: The ARGUS must be set to "Leased line" even if it is a dialup access.	AIS on U ₂ (incoming side) of the NTPM
Sa6 coding	Meaning	Meaning											
0000	Network -> Terminal Setting for normal operation (default)	Terminal -> Network Setting for normal operation, idle (default)											
1010	Switches a loop in the NTPM. In the permanent circuit mode, a BERT can then be performed using the loop setup there. Important: The ARGUS must be set to "Leased line" even if it is a dialup access!												
1111	Switches a loop in the LEPM. In the permanent circuit mode, a BERT can then be performed using the loop setup there. Important: The ARGUS must be set to "Leased line" even if it is a dialup access.	AIS on U ₂ (incoming side) of the NTPM											
<p>A bit</p>	<p>Using the ARGUS, you can set the A bit on a PRI access. By default, it is preset to A=0 (automatic). This setting will not be saved permanently</p>												
<p>CRC4 mode</p>	<p>CRC4 monitoring can be switched on or off manually. By default, it is preset to CRC4. This setting will not be saved permanently</p>												

<p>Call parameters</p>	<p>Two different parameters can be set for calls generated (on a PRI access) on both the network-side (ARGUS in NT mode) and on the user-side (ARGUS in TE mode):</p> <p>1. Type of number (TON) for the CGN (=CGPN) or CDN (=CDPN) element of a SETUP signal</p> <p>Network-side: Net CGN TON / Net CDN TON</p> <p>Default setting: Automatic</p> <p>2. Numbering Plan (NP) for the CGN (=CGPN) or CDN (=CDPN) element of a SETUP signal</p> <p>Network-side: Net-CGN-NP/ Net-CDN-NP</p> <p>User-side: User CGN NP / User CDN NP</p> <p>3. CGN/CDN Subaddress CGN/CDN Subaddress type: User specific and NSAP Default setting: User specific</p> <p>4. UUI (User User Info)</p>
<p>Services</p>	<p>Up to three user-specific services (user spec.1 to user spec.3) can be entered and saved. The three Info elements, BC, HLC and LLC (switch using the left softkey) must be entered for each user specific service in hexadecimal using the keypad and softkeys <A . . . F> (e.g. to enter a C press the softkey three times, to enter an F press it six times).</p>
<p>Call acceptance</p>	<p>If the ARGUS is set to "own MSN/DDI" and is in TE mode on a P-P access, it will only signal those calls which are placed to the DDI of the access under test.</p> <p>If set to "all MSN/DDI", the ARGUS signals all calls.</p> <p>The prerequisite for this is (This setting will be saved permanently): The own call number must be entered in speed-dialing memory under "own number" (see the ARGUS main Manual)</p> <p>Default setting: all MSN/DDI.</p>
<p>Voice coding</p>	<p>Two codes are available for coding voice data in a B-channel (this setting will be reset to the default when the ARGUS is switched off): μ-law and a-law (default setting)</p>

3.4 Bit error rate Test

The bit error rate test (BERT = Bit Error Rate Test) is used to check the transmission quality of the access circuit.

As a rule, the network operator will guarantee an average error rate of 1×10^{-7} , in other words in long-term operation 1 bit error in 10 million transmitted bits. A higher bit error rate will be especially noticeable in transmitting data.

The application program detects the errors in the data blocks transmitted and requests that the remote partner send them again, which reduces the effective throughput of the PRI connection.

In the bit error rate test, the tester establishes a PRI connection to a remote tester (end-to-end) or calls itself (self call), sends a standardized (quasi-) random number string and compares the received data with that which was sent. The individual bit errors are summed and depending on the test procedure and equipment evaluated in accordance with the ITU Guideline G.821.

During the test, the ARGUS counts the bit errors and after the test is done it calculates the bit error rate and other parameters in accordance with the ITU-T G.821 standard.

As a rule, the quality of the network operator's access circuits is quite good. Therefore, no bit errors should occur in a one-minute test. However, if an error occurs, the test should be repeated with a measurement time of 15 minutes to achieve higher statistical precision. The access circuit is heavily distorted, if more than 10 bit errors occur within a test period of 15 minutes.

Contact the network operator or the supplier of the PBX equipment and ask them to test your access circuit.



In the case of an NGN (Next Generation Network), where a packet-switched network segment may follow a circuit switched one, please explicitly select "UDI 64k" as the service for the BERT. Then the ARGUS will, in accord with RFC 4040, switch to clear mode, deactivate the echo canceler and not use a codec.

The BERT can be performed in three different ways:

1. BERT in an extended self call

A remote number is not needed, since the ARGUS sets up the PRI connection to itself. In this case, the ARGUS requires two B-channels for the test.


2. BERT with a loopbox

A loopbox (e.g. another member of the ARGUS family of testers at the remote end) is required. The test uses one B-channel.

3. BERT end-to-end

This test requires a waiting remote tester (e.g. a second ARGUS in the "BERT wait" mode). (see page 25 BERT wait) A bit pattern is sent to this remote tester. Independent of the received bit pattern, the remote tester uses the same algorithm to generate the bit-pattern that it sends back. Therefore, both directions are tested independently.

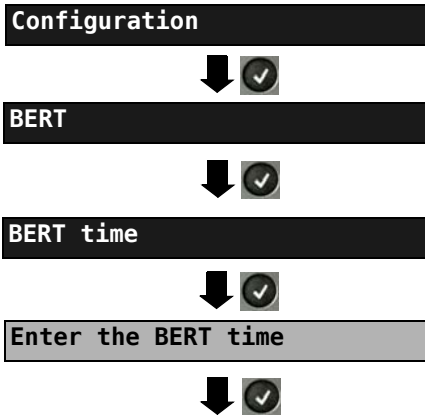

3.4.1 Setting the BERT Parameters




The ARGUS - Main menu

The procedure for configuring a parameter will be illustrated with a single example: The default settings for the parameters can be restored at any time (see the ARGUS main Manual).

The ARGUS sets the value entered as the default BERT time and returns to the next higher menu.

Setting	Explanation
BERT time	<p>You can use the keypad to enter measurement times ranging from 1 minute to 99 hours and 59 minutes (= 99:59).</p> <p> If the time is set to 00:00 (=BERT with unlimited measurement time), the BERT will not stop automatically. In this case, the BERT must be terminated manually by pressing the .</p> <p>Default setting: 1 minute</p>
Bit pattern PRI	<p>This function is used to select the bit pattern to be sent cyclically by the ARGUS to perform a BERT on a PRI access (see "Bit patt. BRI/U").</p> <p>($2^{15}-1$= default setting).</p>
Error level	<p>This is the level used to evaluate whether the BERT had an "acceptable" bit error rate.</p> <p>If the BERT has a bit error rate, which exceeds this error level, the ARGUS will display a "NO" as the test result.</p> <p>Using the keypad, this parameter can be set to any value from 01 (= 10^{-01}) to 99 (= 10^{-99}).</p> <p>The default threshold (error level) is 10^{-06} (1E-06). That means that, in the event that the bit error rate is less than 10^{-06} (one error in 10^6 = 1,000,000 sent bits), the bit error rate test will be evaluated as OK.</p>
HRX value	<p>Setting the HRX value (Hypothetical Reference Connections, see the ITU-T G.821)</p> <p>Using the keypad, you can enter a value ranging from 0 to 100%.</p> <p>Default setting: 15 %</p>

3.4.2 BERT start

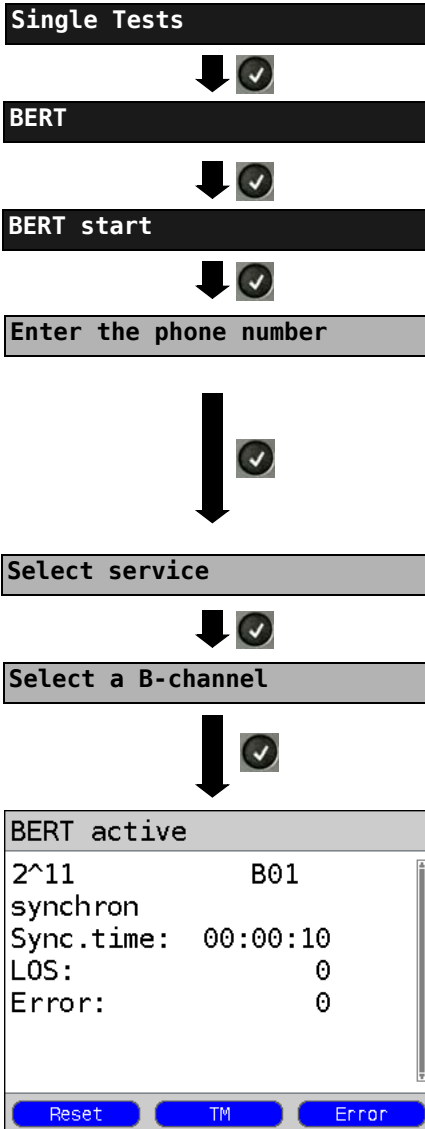

The ARGUS - Main menu

The ARGUS opens the speed-dialing memory (see the ARGUS main Manual). Enter/dial your own number to perform the BERT in an extended call to oneself (two B-channels). Enter/dial a remote number for a BERT to a loopbox (one B-channel) or end-to-end.

<↓> Scroll through the speed-dialing
<↑> memory.


Using the cursor keys, select the service which should be used for the BERT.

Enter the B-channel on the keypad (first press <Delete>). If you enter an *, the ARGUS will choose any B-channel that is free.

BERT start

After the connection has been setup and synchronized in both the send and receive directions, the ARGUS will display:


- the bit pattern and B-channel / bit rate used
- Synchronicity of the bit pattern (in the example, synchron)
- Sync.time in h:min:sec (The time in which the ARGUS can sync to the bit pattern)
- LOS-counter: shows the absolute number of synchronisation losses. synchronisation is lost at an error rate greater than or equal to 20 % within a period of a second.
- The number of bit errors that have occurred

<Error>	The ARGUS will generate an artificial bit error, which can be used to test the reliability of the measurement (in particular for end-to-end tests).
<TM>	Opens the Test Manager, see page 59
0-Key or <Reset>	Restarts the BERT. The test time and number of bit errors will be reset.
	Stop the BERT

When a bit error is detected the ARGUS will sound a brief alarm. When synchronisation has been lost, the ARGUS will sound a constant alarm (see the ARGUS main Manual), if one has been configured earlier.


After the BERT is over, the ARGUS will display the cause and the location which initiated the disconnect. If the test ran normally, the ARGUS will display "Active clearing" on this line.

BERT results:

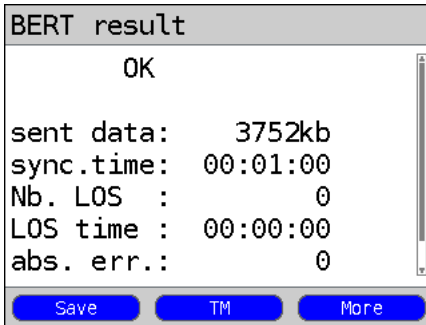


To scroll through the results

- The evaluation of the results depends on the error threshold that you set (in the example, OK).
- sent data (data transferred) (K = 1024 bits, k = 1000 bits)
- sync.time in h:min:sec (The time in which the ARGUS can sync to the bit pattern)
- Nb. LOS (counter) synchronisation is lost at an error rate greater than or equal to 20 % within a period of a second. The absolute number (Nb.) of synchronisation losses will be shown.
- LOS time: Duration of the BERT minus the sync. time (The time in which the ARGUS could not sync to the bit pattern after it had been in sync at least once)
- abs. err.: The number of bit errors
- rel. err: Bit error rate (e.g. $9.7E-07 = 9.7 \cdot 10^{-7} = 0.00000097$)

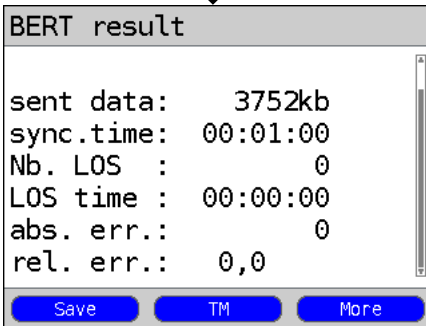

Display of other characteristic values (in accordance with ITU-T G.821)

All values are given in percentages and absolute values. The ARGUS evaluates whether the test results satisfy the limits specified in the G.821 under consideration of the reference connection (HRX). (The display will show either OK or NO).

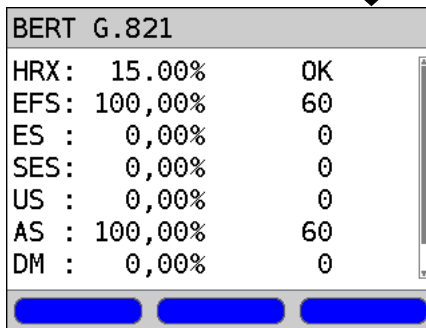

To scroll through the results



Return to the previous display

Characteristic values (in accordance with ITU-T G.821)

- HRX** Defines the hypothetical reference connection
- EFS** Error Free Seconds:
The number of seconds in which no error occurred.
- ES** Errored Seconds:
The number of seconds in which one or more errors occurred.
- SES** Severely Errored Seconds:
The number of seconds in which the bit error rate is greater than 10^{-3} .
In one second, 64,000 bits are transferred, thus BitErrorRate (BER) = 10^{-3} equates to 64 bit errors.
- US** Unavailable Seconds:
The number of all sequentially adjacent seconds (at least 10 sec) in which $BER > 10^{-3}$.
- AS** Available Seconds:
The number of all sequentially adjacent seconds (at least 10 sec) in which $BER < 10^{-3}$.
- DM** Degraded Minutes:
The number of minutes in which the bit error rate is greater than or equal to 10^{-6} .
In one minute, 3,840,000 bits are transferred, thus a $BER = 10^{-6}$ corresponds to 3.84 bit errors (3 errors = NO (no degraded minutes), 4 errors = OK (Degraded Minutes)).
- LOS** Loss of Synchronise:
synchronisation is lost at an error rate greater than or equal to 20 % within a period of a second.
The absolute number of synchronisation losses will be shown.

3.4.3 BERT saving

The ARGUS can store the results of several BERTs. The ARGUS saves the results together with the date, time and call number of the access under test (if this number has been entered as the "own" number in the speed-dialing memory, see the ARGUS main Manual) in the next free memory location. If all of the memory locations are used, the ARGUS will select the oldest test results to be overwritten.

BERT result

OK

sent data: 3752kb
sync.time: 00:01:00
Nb. LOS : 0
LOS time : 00:00:00
abs. err.: 0

Save TM More



Store the result



<Yes>

save as:

AMP_1

Delete ab>AB

Using the numeric keys, enter the name under which the ARGUS should save the results (see the ARGUS main Manual). By default, the ARGUS will use the call number last used as the record name.

Save BERT results



BERT start

3.4.4 BERT wait

In "BERT wait" mode, the ARGUS will wait for the BERT at the remote end which is necessary for an end-to-end test:

Single Tests

The ARGUS - Main menu



BERT



BERT wait

Activate "BERT wait"



BERT active

```
2^11      B01
synchron
Sync.time: 00:00:10
LOS:      0
Error:    0
```

The ARGUS first waits for a call and then sets up the connection. During the connection, the received bit pattern will be evaluated and an additional independent bit pattern will be sent.

<TM> Opens the Test Manager
(page 59)

For information on the displays shown, see "BERT start" on page 20.

Reset

TM

Error



Display BERT results

3.4.5 B-channel loop

“B-channel loop” mode is required in order to run a bit error rate test using a loopbox (an ARGUS is the loopbox) at the remote end.




The ARGUS - Main menu

Activate a “B-channel loop”
The ARGUS will wait for a call. Any incoming call (regardless of the service) will be taken immediately. The ARGUS will switch a loop back in the B-channel that is specified by the exchange and then send (loop) the received bit pattern back to the caller/sender.

<Menu> Open the Main menu:
the “B-channel loop” remains active.
A second B-channel loop connection can be started from this menu or from the <TM>.
From the <TM> (see page 59) the ARGUS will return to the “B-channel loop wait active” display.

<TM> Opens the Test Manager (page 59)


 Exit “B-channel loop” mode


Display shown after taking a call:

- B-channel used and service
- The caller's number (from:)
- The number dialed (to:)
- If available: TON, NP, UII etc.

<TM> Opens the Test Manager (page 59)

<Menu> Open the Main menu.

 Clear down the B-channel loop connection, the B-channel loop, however, remains active!

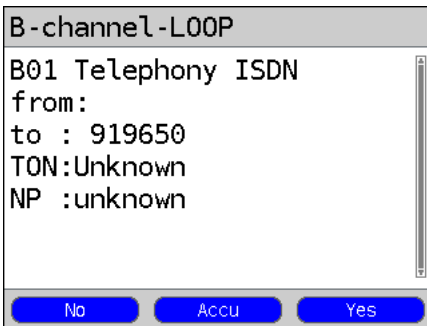

3.5 Supplementary Services Test

The ARGUS checks whether the access under test supports supplementary services.

3.5.1 Supplementary Services on DSS1

Single Tests



Supplementary Services



Enter own number



Select service



Select a B-channel



Select test case



Supp. Serv. test

TP -

The ARGUS - Main menu

The speed-dialing memory will open (see the ARGUS main Manual).

< ↓ > Scroll through to your own call number (the number of the access under test) or enter it using the keypad.

The ARGUS will test the availability of the supplementary service (in part by placing a call to itself).

Using the cursor keys, select the service which should be used for the supplementary services test.

Enter the B-channel on the keypad. The ARGUS selects the B-channel used last. If you enter an "*", the ARGUS will choose any B-channel that is free.

Select the supplementary service, which the ARGUS should determine whether it is supported by this access.

Start test

Display the test results:

- + = suppl. service supported
- = suppl. service not supported



To scroll through the results



Close the results display.
Open the next higher menu.

3.5.2 Error Messages

If an error occurs during the Supplementary Services Tests or if it is not possible to setup a call, the ARGUS will display the corresponding error code (e.g. 28).

Example: The error code 28 equates to "wrong or invalid number" (see the ARGUS main Manual).

3.6 Service Tests

The ARGUS checks, which of the following services are supported by the access under test:

Service	Name displayed on the ARGUS
Language	Language
Unrestricted Digital Information (data telecommunications)	UDI 64kbit
Audio 3.1 kHz	3.1kHz audio
Audio 7 kHz	7 kHz audio
Unrestricted Digital Information with Tones & Announcements	UDI-TA
Telephony	Telephony PRI
Telefax Groups 2/3	Fax G3
Fax Group 4	Fax G4
Combined text and facsimile communication	Mixed Mode
Teletex Service basis mode	Teletex
International interworking for Videotex	Videotex
Telex	Telex
OSI application according to X.200	OSI
7 kHz Telephony	Telephony 7kHz
Video telephony, first connection	Video telephony 1
Video telephony, second connection	Video telephony 2
Three user-specific services	User-specified 1 to 3

(see the ARGUS main Manual)

3.7 X.31 Test

The ARGUS will perform a “Manual X.31 Test” or, if desired, an “Automatic X.31 Test”: In the case of an automatic test, the ARGUS will first setup the D-channel connection and then an X.31 connection. The ARGUS will then automatically clear the connection and display the results.

In the case of a manual test, the ARGUS will setup a D-channel connection and an X.31 connection. The duration of this connection is determined by the user (or the remote end). For the duration of the connection, the ARGUS will repeatedly send a predefined data packet. The ARGUS will count all of the data packets sent and received and will display (where possible) the contents of the data packets received.

3.7.1 Setting the X.31 Parameters

Configuration

The ARGUS - Main menu



X.31 profile



● **X.31 profile 1**

The ARGUS stores the parameters for the X.31 in the three X.31 profiles.



Mark a profile for editing. The selected profile will be marked blue in the display. The default profile will be marked in the display with a ●. The ARGUS will use the parameters in the current profile for the X.31 test.

<Edit>



The ARGUS takes over the marked profile as the default and returns to the Settings menu.

TEI










Enter a TEI



The ARGUS saves the TEI entered and returns to the next higher menu.

It is possible to restore the default settings for the parameters (see the ARGUS main Manual).

Setting	Explanation
X.31 profile:	
Packet number	Number of packets sent Default setting: 10
TEI	Entry (from the keypad) of the TEIs (Terminal Endpoint Identifier) to be used in the X.31 test. If you enter **, the ARGUS will automatically select a TEI. Minimum 0 to a maximum of 63
LCN	Use the keypad to enter the LCN (Logical Channel Number) to use in the X.31 test. Default setting: 1
Packet size	The size of the data packets Default setting: 128 Bytes
Agree Packet size	Negotiate with the network side (DCE) regarding the data packet size. If the desired data packet size is larger than the default, this parameter should be set to "yes". Default setting: No
Window size	Window size of Layer 3 Default setting: 2 Packets
Negotiate window size	Negotiate between the terminal (DTE) and the network (DCE) an agreement regarding the window size. Default setting: No
Throughput	Data throughput in bits/sec Default setting: 1200 bit/s
Agree Throughput	Throughput agreed Default setting: No

<p>User data</p> <p>ASCII data</p> <p>↓ </p> <p>● ASCII data 1/3</p> <p>↓ <Edit></p> <p>Enter ASCII data</p> <p>↓ </p> <p>Save ASCII</p>	<p>Content of the user data: Format setting of the user data:</p> <p>- Entry of the ASCII data</p> <p>Use the cursor keys to select one of the three available memory locations for the ASCII data (in this example, the first location 1/3)</p> <p>Use the numeric keypad to enter the ASCII data. When the right softkey is pressed it assumes a different meaning and thus influences the entries made from the keypad:</p> <p><12>ab> Entry of the digits 0 to 9 plus * and # <ab>AB> Entry of the lowercase characters and @, /, -, and . (e.g. to enter a "c" press the "2" on the keypad three times) <AB>12> Entry of the uppercase characters and @, /, - and .</p> <p> Move the cursor</p> <p><Delete> Delete the character before the cursor</p> <p> Do not save ASCII data.</p>
<p>Hex data</p> <p>↓ </p> <p>● Hex data 1/3</p> <p>↓ <Edit></p> <p>Enter hexadecimal data</p> <p>↓ </p> <p>Save</p>	<p>Entry of the hexadecimal data:</p> <p>Select one of the three available memory locations for the hexadecimal data (in this example, the first location 1/3)</p> <p>Use the keypad to enter the hex value. To enter the values A...F, use the softkey <A...F> (e.g. to enter a C, press the softkey <A...F> three times). To confirm the entry, press <OK> (the softkey in the middle changes from <Delete> to <OK>).</p> <p><Delete> Delete the character before the cursor</p> <p> Do not save the hexadecimal values.</p>
<p>D bit</p>	<p>Local: DCE acknowledges data packets, i.e. flow control on local DTE-DCE path</p> <p>End-to-end: DTE-DTE flow control</p> <p>Default setting: Local</p>

3 Operation on a PRI Access

Facilities	Coding for various supplementary services A maximum of 3 facilities can be stored.
Profile name	Use the keypad to enter the profile name for the X.31 profile. The ARGUS will later display this name for the profile.

3.7.2 Automatic X.31 Test

D-Channel

The “X.31 Automatic, D-channel” test consists of two steps:

1. **Step:** The ARGUS tests whether it is possible to access the X.25 service via the D-channel on the ISDN access under test. The ARGUS checks all of the TEIs from 0 to 63 one after the other. All the TEIs, which support X.31 service on Layer 2, will be displayed.
2. **Step:** For each TEI with which X.31 is possible on Layer 2, a CALL_REQ packet will be sent and then the ARGUS will wait for an answer. Beforehand, the ARGUS will request the entry of the X.25 access number, which will be saved in speed-dialing memory under X.31 test number. With the entry of the X.25 access number, you can – if you wish – select a logical channel (LCN) other than the default.

Single Tests

The ARGUS - Main menu

X.31 Test

• X.31 profile 1

Select the profile

<edit> Change to the profile parameters
The parameters can be edited.

Automatic

D-Channel

Start test

X.31-Test


current TEI:
07

previous TEI:
06 NOK

The start up procedure can take up to 4 minute. The ARGUS will display the currently tested TEI, the previously tested TEI and the results:

OK = X.31 is available for this TEI
NOK = X.31 is not available for this TEI

Test results

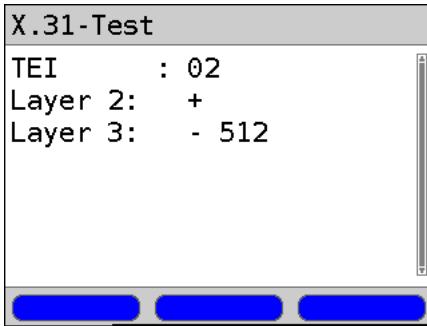

The ARGUS will check whether the X.31 service is available for Layer 3 for the TEIs found in Step 1.

Example: Test results

- TEI 02** The first valid TEI is 02.
- Layer 2** + 1. Test step was successful
 - 1. Test step was not successful
- Layer 3** + 2. Test step was successful
 - 2. Test step was not successful
- In this case, the ARGUS will display the relevant X.31 cause for the failure (in the example above: 512) and the associated diagnostic code if there is one.

If the X.31 service is not supported, the ARGUS will report "X.31 (D) n. impl.".

3.7.3 Manual X.31 Test

D-Channel

The ARGUS first requests a TEI, an LCN and an X.31 number (The ARGUS uses the values stored in the X.31 profile.). If an "*" is entered for the TEI, the ARGUS will automatically determine a TEI. Using the first TEI with which X.31 is possible, the ARGUS will setup a connection.

Single Tests

The ARGUS – Main menu

X.31 Test

• X.31 profile 1

Select a profile.

<Edit> Change to the profile parameters
The parameters can be edited.

Manual

D-Channel

TEI is displayed

The ARGUS displays the TEI stored in the X.31 profile. It can be edited from the keypad. If you enter „*“, the ARGUS will automatically select a TEI.

<Delete> Delete the TEI

LCN is displayed


The ARGUS displays the stored LCN. It is possible to edit the LCN from the keypad.

X.31 number displayed

The ARGUS displays the X.31 number saved in the speed-dialing memory. It can be edited from the keypad.

Setup a X.31 connection.

Continuation on
next page

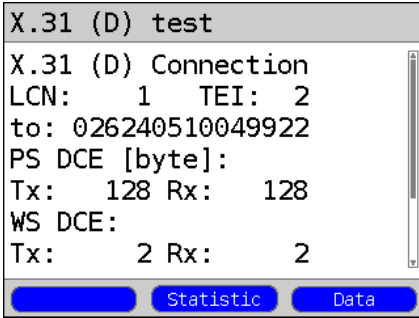

The ARGUS will display the LCN, the TEI, the X.31 number and the negotiated connection parameters.

- <Data> Sends a predefined data packet
- <Stat.> Press STAT. to display the L1/L2/L3 statistics.
- <L2> To scroll to the L2 statistics
- <L3> To scroll to the L3 statistics

The X.31 connection will be maintained until the user or the remote end clears it. When the X.31 connection is cleared, the ARGUS will automatically clear the D-channel connection.

- <Yes> The ARGUS saves the results.

3.8 Connection display

The ARGUS can setup a connection for the following services:

Service	Display
Language	Language
Unrestricted Digital Information (data telecommunications)	UDI 64kBit
Audio 3.1 kHz	3.1 kHz audio
Audio 7 kHz	7 kHz audio
Unrestricted Digital Information with Tones & Announcements	UDI-TA
Telephony	Telephony PRI
Telefax Groups 2/3	Fax G3
Fax Group 4	Fax G4
Combined text and facsimile communication	Mixed Mode
Teletex Service basis mode	Teletex
International interworking for Videotex	Videotex
Telex	Telex
OSI application according to X.200	OSI
7 kHz Telephony	Tele. 7 kHz
Video telephony, first connection	Video telephony 1
Video telephony, second connection	Video telephony 2
Three user-specific services	User-specified 1 to 3


(see the ARGUS main Manual)

A headset or the integrated handset can be used as a phone during a telephone connection.

When a connection is set up, pressing the number keys (0-9) or the * or # will generate and send the corresponding DTMF tones.

Overlap sending (outgoing call)

In overlap sending, the digits entered for the call number are sent individually.

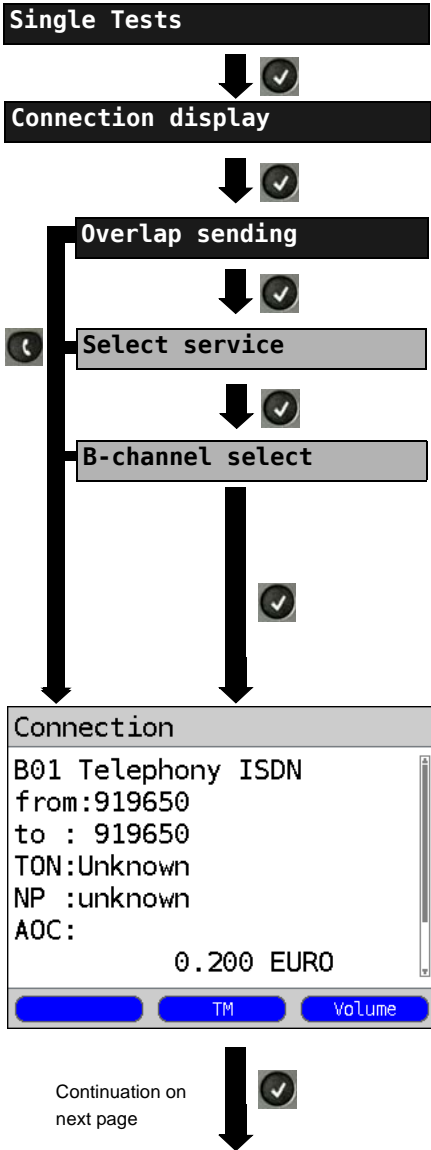

The ARGUS - Main menu

- The ARGUS will open the Connection display
Where Overlap sending (such as links) as well as
 - En-block sending (see below)
 - Redialing (see below)
 - Keypad dialing
 are available.

Select the service to be used for the connection.

Enter the B-channel on the keypad. The ARGUS selects the B-channel used last. To enter a new B-channel, first press <Delete>. If you enter an *, the ARGUS will choose any B-channel that is free. The ARGUS will show whether the B-channel is available.

Setup the connection

Enter the number on the keypad.

Display:

- B-channel and service
- The number that is stored in the speed-dialing memory under "Own number", see the ARGUS main Manual (from:)
- The number dialed (to:)
- Other information depending on the access, e.g. TON and NP

<TM> Starts the Test Manager (page 59)

<Volume> Setting the volume

or Cancel setup




Connection	
B01 Speech	
from:919650	
to : 907084	
TON:Unknown	
NP :unknown	
AOC:	
Units	1
<div style="display: flex; justify-content: space-around;"> TM Volume </div>	

The connection is setup using B-channel 1.



Depending on the type of access other information will be displayed.

- Subaddress of the caller (SUB)
- Destination number
- User-User Information (UUI)
- Display Information
- Type of number (TON)
- Numbering Plan (NP)
- Units for charges



Disconnect

<Volume> Setting the volume

<TM> Starts the Test Manager (see page 59)

Displaying Advice of Charges (AOC)

If the charges are not given in units, rather directly as currency, the ARGUS will display the current charges in currency. If, in DSS1, the call charges are not provided in accordance with the DIN ETS 300182 standard, rather in the form of the information element DISPLAY (DSP), the ARGUS will display the DISPLAY message's character string.



Note regarding the entry of the own call number

Separate the extension from the access number with a # (e.g. 02351 / 9070-40 is entered on the ARGUS as: 023519070 #40). For an outgoing call, the ARGUS uses the entire call number (without #) as the number called (CDPN or DAD) and, for the calling number, only the extension (DSS1-CGPN or 1TR6-OAD). A '#' at the beginning of a call number is treated as a valid character. A '#' at the end of the own call number instructs the ARGUS to not send the caller's number for outgoing calls (CGPN or OAD).



Simplified overlap signaling using the telephone key



depressed:

The ARGUS will open the Connection/Overlap window directly regardless of the currently open menu.




depressed again:

A dial tone will be heard and once the call number is entered, the call will be setup.

En-bloc sending (outgoing call)

In en-bloc sending, the ARGUS sends the entire dialing information in one block.

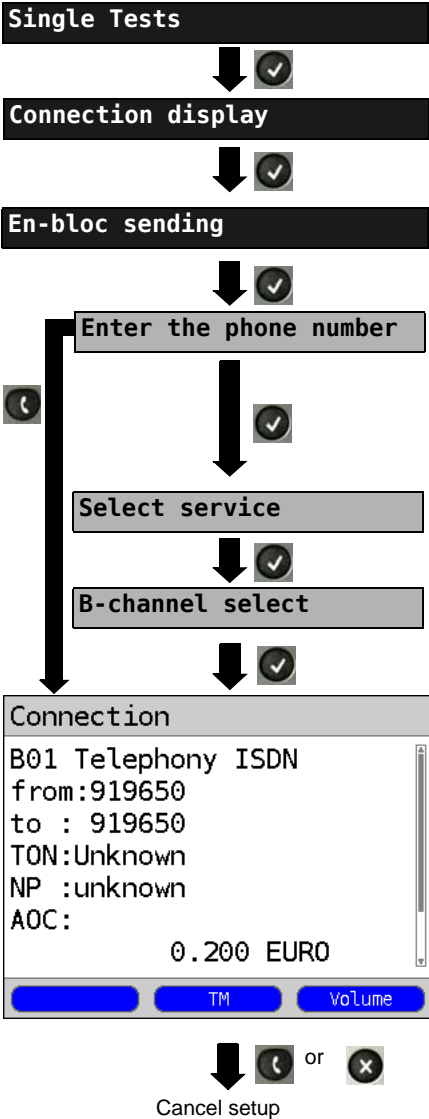

The ARGUS - Main menu

The ARGUS opens the speed-dialing memory (see the ARGUS main Manual). Use the cursor keys to scroll to desired the number or reenter the number on the keypad.



The ARGUS will open the Connection display. For more information see overlap sending which is similar.

Enter the B-channel on the keypad (for details on entry, see "Overlap sending").

Start the dialing procedure

For more information on the displays and operation, see overlap sending.

<Volume> Setting the volume

<TM> Starts the Test Manager (page 59)

Redial (outgoing call)

The ARGUS will set up a call using the last number dialed.

The ARGUS – Main menu

Single Tests



Connection display



Redial



Select service



B-channel select



Connection

B01 Telephony ISDN

from:919650

to : 919650


TON:Unknown

NP :unknown

AOC:

0.200 EURO

TM
VoLume



Cancel setup

Enter the B-channel on the keypad. The ARGUS suggests the B-channel used last. To enter a new B-channel, first press <Delete>. If you enter an *, the ARGUS will choose any B-channel that is free. The ARGUS will show whether the B-channel is available.


The dialing procedure will begin using the number which was dialed last.

For more information on the displays and operation, see overlap sending.

- <Volume> Setting the volume
- <TM> Starts the Test Manager (see page 59)

Incoming Call

An incoming call can be taken at any time even when a test (e.g. a BERT) is in process (see page 60). The ARGUS will signal an incoming call with an audible tone and a message on the display. The function Accept call (see the ARGUS main Manual) can be configured so that, on a P-P access, the ARGUS will only signal incoming calls that are placed to its own call number. This function can only be used when the own call number has been entered into the speed-dialing memory (see the ARGUS main Manual) and the incoming call has a call number.

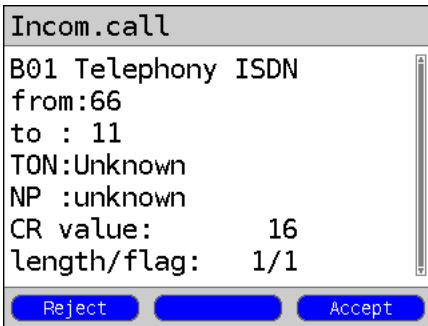


Reject call

Display:

- B-channel used and service
- The caller's number (from:)
- Destination number (to:)
- Other information depending on the access, e.g. TON and NP

The ARGUS will display the complete destination number (DDI), if the Alerting mode is set to manual (see the ARGUS main Manual).

To take the call.

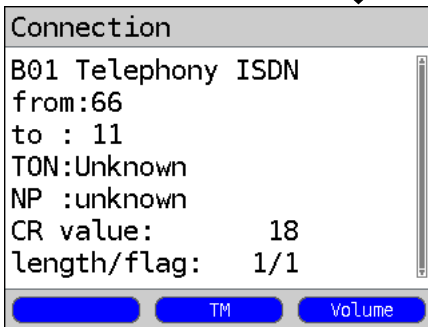

Depending on the access, additional information will be displayed (in this example, TON and NP).

<Volume> Setting the volume

<TM> Starts the Test Manager (see page 59)



The ARGUS displays the cause of the disconnect (see page 43).

Charge information in NT mode:

In NT mode, the ARGUS will – for incoming calls – send advice of charges in accordance with DSS1 as units and as currency (in euros).

3.9 Clear down (disconnect) the connection


Connection

```
B01 Telephony ISDN
from:66
to : 11
TON:Unknown
NP :unknown
CR value:      18
length/flag:  1/1
```

TM Volume

<Volume> Setting the volume

<TM> Starts the Test Manager
(see page 59)



Call clearing

```
Cause: 16
Normal clearing
Location: publ.local
CR value:      19
length/flag:  1/1
```

TM Volume

The ARGUS will display the cause (see the table below) of the disconnect (e.g. Normal clearing) and the location where the cause occurred (e.g. subscriber). Depending on the access, additional information will be displayed (in this example, Units).

The following causes are shown in clear text:

Reason	Display	Explanation
255	Active clearing	Clearing User actively initiated the disconnection
Length 0	Normal disconnect	Cause element with length 0
01	unalloc. number	No access under this call number
16	Normal disconnect	Normal disconnect
17	User busy	The number called is busy
18	No user respond	No answer from the number called
19	Call time too long	Call time too long
21	Call reject	The call is actively rejected

28	Wrong number	Wrong call number format or call number is incomplete
31	Normal disconnect	Unspecified "normal class" (Dummy)
34	No B-chan.avail.	No circuit / B-channel available
44	Req.chan.unavail	Requested B-channel not available
50	Req.fac.not subs	Requested supplementary service (facility) not subscribed
57	BC not authoriz.	Requested bearer capability is not enabled
63	Srv/opt.n.avail	Unspecified for "Service not available" or "Option not available"
69	Req.fac.not impl.	Requested facility is not supported
88	Incompat. Destination	Incompatible destination
102	Timer expired	Error handling routine started due to time-out
111	Protocol error	Unspecified for "protocol error class"
127	Interworking err	Unspecified for "interworking class"

Other causes will not be displayed in plain text but will instead be shown as decimal numbers (see "CAUSE Messages - DSS1 Protocol" on page 16).

3.10 Connection setup time

The ARGUS places an outgoing call and measures the time between sending the SETUP and receiving the ALERT or CONN. The ARGUS disconnects automatically as soon as the measurement is completed.

Single Tests



Time measuring



Conn. up time



Dial the number



Select service



B-channel select



Conn. setup time

0.197 s ALERT



The ARGUS – Main menu

The ARGUS opens the speed-dialing memory (see the ARGUS main Manual). Use the cursor keys to scroll to desired the number or reenter the number on the keypad.

Enter the B-channel on the keypad.

Perform measurement

Display:

- Connection setup time in seconds
- L3 message received when the connection has been fully setup


If the ARGUS cannot perform the measurement - e.g. because the call number entered was wrong or no B-channel is free - the cause (see the ARGUS main Manual) will be displayed.

3.11 The L1 Status of a PRI Access

The ARGUS displays the Layer 1 alarms and messages, which provide detailed information regarding the state of the PRI access and the transmission line (For further information, see the CCITT/ITU guidelines G.703 and G.704).

The ARGUS - Main menu

L1 state

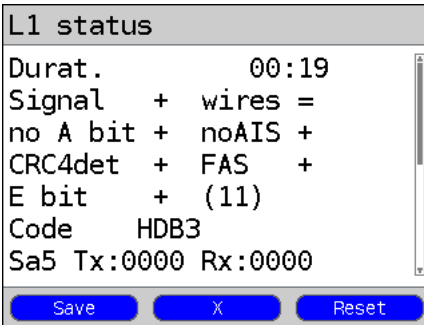

The ARGUS displays the time that has elapsed since the ARGUS was initially started or it was last reset in minutes and seconds (00:19).

The measurement time and all Layer 1 alarms and messages are updated continuously.

Use the cursor keys to scroll

- <x> The PRI relay for the Rx/Tx pin assignment will be toggled to its other position, regardless of the state that it was in before. This function is only available in the L1 status menu if there is currently no signal. The state of the relay will remain unchanged when you close the L1 status menu.
 - wires = means that Rx/Tx are normal
 - wires X means that Rx/Tx are inverted
- <RESET> Reset the History function and all counters.
- <SAVE> Save results (see the ARGUS main Manual)

OK symbol: +


Error symbol: -

History symbol: ! This indicates that, regardless of the current state of the access (+ or -), an error occurred during the test period.

The meaning of the individual displays:

Signal	The ARGUS has received the correct send signal from the remote end (access or terminal depending on whether operating in TE-Simulation or NT-Simulation mode) and indicates this by displaying a +. If the Rx and Tx are on the usual wires, a "=" will be shown after wires; if they are swapped, an "x" will be shown instead.
FAS	Frame Alignment Signal Indicates whether the ARGUS could correctly synchronize with the incoming 2 Mbit data stream's alternating frame identification word or message word and the, perhaps present, CRC4-superframe structure.
CRC4 det	If CRC4-monitoring is active for the access or the terminal and the ARGUS is able to synchronize itself to the CRC4 superframe, it will indicate this by displaying "CRC det +". If "CRC det -" is displayed together with "Signal +" and "FAS +", this indicates that no CRC4 is active. To prevent power up effects (transients), we recommend that you set the display and counter to a defined initial state with a <Reset>.
Code HDB3	Display the transmission code used (currently set to HDB3)
noA-Bit	The remote end uses the A-Bit to signal whether the circuit is available on their receive side. noA-Bit + means A = 0: Idle state noA-Bit - means A = 1: Return direction is not available
noAIS	Alarm Indication Signal) AIS will be set if a component on the transmission line determines that the signal they have received is faulty (e.g., in the event, that they lose frame synchronisation) and has sent a Time -1 (= AIS) to indicate this. "noAIS = +:" no AIS occurred.
Sa5-Bit (Rx,Tx)	The "Sa5-Bit (Rx)" sent by the ARGUS can be configured in the Configuration menu (See "Sa5 bits" on page 14)
Sa6-Bit (Rx,Tx)	The "Sa6-Bit (Rx)" sent by the ARGUS can be configured in the Configuration menu (See "Sa6 bits" on page 15)
E-Bit	With the two E-Bits, E1 and E2, the remote end will report any CRC4-errors that it finds on its receive side in the first or second.submultiframe (the E-Bit will be set to 0). "E-Bit11+:" if both E-Bits are set to 1, no error occurred "E-Bit11+!:" A CRC4-error was found (indicated by the "!"), however the circuit is in largest part OK (see the E-Bit counter Ecnt or the CRC4 error counter CRCErr)

Ecnt	The E-Bit counter counts the individual E-Bit error messages; i.e. all cases where a faulty CRC4 submultiframe was received (counts at a maximum of 1 kHz)
CRC Err	The CRC4 error counter totals the number of CRC4 submultiframes in which errors were detected.
CRC rel	Shows the CRC4 error rate, in other words, the number of faulty CRC4 frames relative to the total number of CRC4 frames received.
Code Err	Counter for the detected HDB3 transmission code errors
Code rel	Transmission code error rate
Frm. Err	Counter for faulty 2Mbit frames.

When running a MegaBERT unframed in leased line mode, if the menu L1 status is opened (via the -Key or the Test Manager), the display will only show the parameters Signal and noAIS.

3.12 Monitor

The ARGUS accepts all of the D-channel signals from the S-Bus access and sends these D-channel signals over the USB interface to a PC which must be running ARGUS WINplus or WINAnalyse. The bus and Layer 1 are not influenced by the monitoring.

Access

The ARGUS – Main menu



PRI interface



Monitor



Status display

Monitoring is not yet active!

<Start>

Start monitoring

Monitoring

Durat. 0:00:25
Signals: 41

Listen

The ARGUS displays the recording time (duration) in h:min:sec and the number of recorded signals.



Stop monitoring.


Listening-in on voice data

B-channel select

Enter the B-channel from the keypad (first press <Delete>) or use the cursor keys to set the B-channel. The ARGUS will switch the handset to this B-channel.



Continuation on
next page

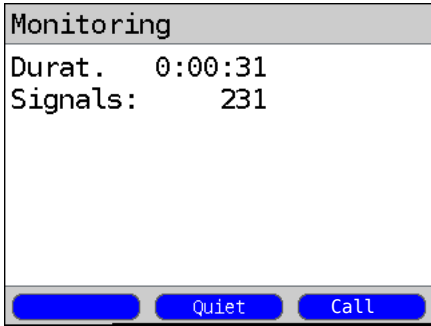

Display call parameters

Can listen-in on voice data (direction: Network -----> User).

<Quiet> To stop listening

<Talk> Parallel call display while monitoring

The ARGUS searches all of the D-channel signals sent for a SETUP. If a SETUP is detected, the <Talk> softkey will be displayed.

The ARGUS displays the call parameters of the last SETUP received.

As soon as a change occurs, the ARGUS will send a time-stamped report of the following alarms/states to the PC, which will evaluate them:


- Signal
- FAS
- CRC4det
- A bit
- AIS

The ARGUS will check the following values and counters every second and, in the event of a change, will pass them on the PC:

- Sa5-Bit (Rx)
- Sa6-Bit (Rx)
- E-Bit
- Ecnt
- CRC Err.
- Cod.Err.
- Fram.Err.


Display of the L1 Status in PRI Monitor mode

The L1 status function is only available in PRI Monitor mode. The Layer 1 alarms and messages are presented in several windows and allow detailed assessments of the state of the PRI access and the transmission line (For further information, see the CCITT/ITU guidelines G.703 and G.704).

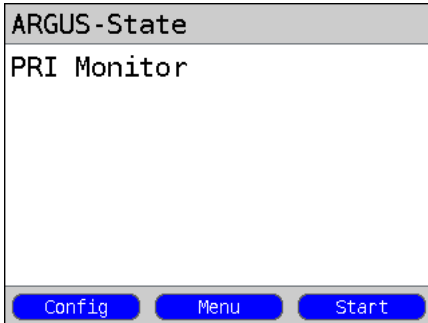

The ARGUS in the PRI Monitor Mode Monitoring is not active.


L1 state

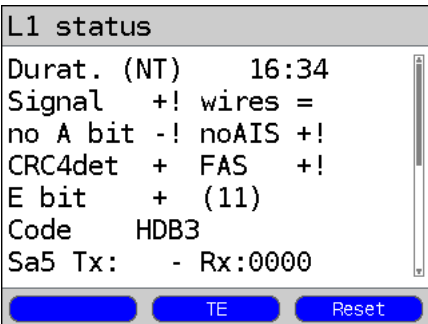

Display of the "NT-side parameters"
Use the cursor keys to scroll through the display

<TE> Switch to "L1 status TE"; the "TE-side parameters" will be displayed

<Reset> Reset the History function

 Quit.
The ARGUS will open the Main menu.

3.13 Leased line on a PRI access

Besides dial-up connections to any subscriber, PRI also supports the use of permanent circuits switched to a specific remote location (leased lines). These leased lines (permanent circuits) are available after setting up Layer 1, in other words after synchronizing both terminals by exchanging HDLC-frames. The location where the clock is generated can be selected . A quick test of a leased line can be made by placing or taking a call on a selected B-channel. However, for a more precise test, a bit error rate test should be run.



Both ends of the permanent circuit (leased line) must use the same channel.

3.13.1 Telephony

Access




● PRI interface



● Leased line



ARGUS -State

 SO/BRI	PRI LLs CRC4 A bit:+ FAS:+
---	-------------------------------------

Config Menu

The ARGUS – Main menu

<Config> Configuring the PRI parameters

Continuation on next page

B-channel select



Setup the telephone connection.



Disconnect

Enter the B-channel from the keypad (first press <Delete>) or use the cursor keys to set the B-channel.

The ARGUS will display the B-channel used and the duration of the leased line (in h:min:sec).

<Volume> Set the volume

<TM> Start the Test Manager (see page 60).
Another connection can be setup.

Alternatively, the connection can be setup via Connection in the Single tests menu.

3.13.2 Bit error rate Test

There are a number of variants of the bit error rate test: In the simplest case, a B-channel loop will be set up at the remote end. Parameter settings (see page 18).

After selection of the channel to be tested (B-channel or D-channel), the ARGUS will send the test pattern, receive it back and evaluate it accordingly.

The displays and operation are, in largest part, similar to those of a BERT on a dial-up connection, you simply need not enter call numbers or select a service.

Single Tests



BERT



BERT start



B-channel (64k)

Continuation on
next page



In the case of a PRI access in end-to-end mode (see page 52), a BERT can be run:

- in the D-channel
- in a B-channel
(Select channel: B-channel (64k))
- in two B-channels
(Select channel: B-channel (128k))
- MegaBERT framed
(optional: in all B-channels and in the D-channel)
- MegaBERT unframed
(optional: all B-channels, the D-channel and time slot 0).

B-channel select



BERT active

A screenshot of a terminal window titled "BERT active". The display shows the following text:

```
2^15          B10+B11
synchron
Sync.time:   00:00:13
LOS:                0
Error:            1
```

At the bottom of the window, there are three buttons: "Reset", "TM", and "Error".

Enter the B-channel from the keypad (first press <Delete>) or use the cursor keys to set the B-channel.

Start BERT (128k-BERT)

During the BERT, the display shows:

- The bit pattern and channel / bit rate used
- Synchronicity of the bit pattern (in the example, synchron)
- Sync.time in h:min:sec
The time in which the ARGUS can sync to the bit pattern
- LOS
synchronisation is lost at an error rate greater than or equal to 20 % within a period of a second. The absolute number of synchronisation losses will be shown.
- Error: The bit errors that have occurred.

<Error> Insert artificial bit errors to test the reliability of the BERT.

<Reset> The test time and number of bit errors will be reset.

<TM> Open the Test Manager (see the ARGUS main Manual)



Stop the BERT
Display the test results (see the ARGUS main Manual).

Saving Test Reports
(see the ARGUS main Manual)

3.13.3 Configuration: BERT

The operation is the same for all configurations and will be illustrated with a single example:

Configuration

The ARGUS - Main menu



BERT



BERT time



Enter the BERT time



Use the keypad to enter the duration of the BERT.



The ARGUS will return to the “BERT config.” menu without making any changes.


The ARGUS saves the settings and returns to the next higher menu.

Settings for the BERT:

Display Name on the ARGUS	Remark
BERT time	<p>You can enter measurement times ranging from 1 minute (default setting) to 99 hours and 59 minutes (= 99:59).</p> <p> If the time is set to 00:00 (=BERT with unlimited measurement time), the BERT will not stop automatically. In this case, the user must terminate the BERT (by pressing the .</p>
Bit pattern PRI	<p>This function is used to select the bit pattern to be sent cyclically by the ARGUS to perform a BERT on a PRI access (see “Bit patt. BRI/U”). ($2^{15}-1$= default setting).</p>

Error level	<p>This is the level used to evaluate whether the BERT had an "acceptable" bit error rate.</p> <p>If the BERT has a bit error rate, which exceeds this error level, the ARGUS will display a "NO" as the test result.</p> <p>Using the keypad, you can enter a value ranging from 01 (= 10^{-01}) to 99 (= 10^{-99}). The default threshold (error level) is 10^{-06} (1E-06). That means that, in the event that the bit error rate is less than 10^{-06} (one error in $10^6 = 1,000,000$ sent bits), the bit error rate test will be evaluated as OK.</p>
HRX value	<p>Setting the HRX value (Hypothetical Reference Connections, see the ITU-T G.821)</p> <p>Using the keypad, you can enter a value ranging from 0 to 100 %.</p>

Setting the MegaBERT bit pattern

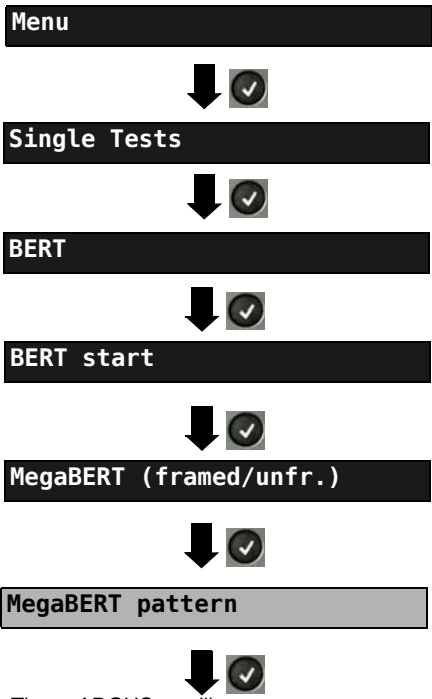

The various MegaBERT bit patterns that are available can be called up in "Leased line" mode as follows:

A distinction is made between two types of MegaBERT in the channel selection:

- MegaBERT framed (31 B-channels)
- MegaBERT unframed (32 B-channels)

The ARGUS will save the setting and start the single test.

Menu for selecting the bit pattern to be used for a MegaBERT:


In a BERT, the ARGUS will repeatedly send the following bit pattern.

Display on the ARGUS	Remark
$2^{15}-1$	32767-bit pseudo-random test sequence in accordance with ITU-T O.150 5.3 (longest sequence of zeros = 15)
$2^{15}-1$ inverted	The ARGUS will send the bit pattern described above inverted.
$2^{20}-1/QRSS$	1048575-bit pseudo-random test sequence in accordance with ITU-T O.150 5.5 (longest sequence of zeros = 14)
$2^{20}-1/QRSS$ inverted	The ARGUS will send the bit pattern described above inverted.
Constant NULL	The ARGUS will only send nulls (zeros).
Constant ONE	The ARGUS will only send ones.

3.13.4 Loopbox

The ARGUS can be used as a loopbox on a permanent circuit (leased line).

The ARGUS - Main menu

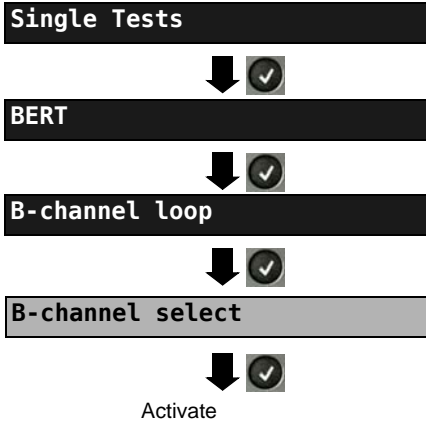

Select channel:

The ARGUS will loop on either one B-channel (channel selection: B-channel) or all B-channels and the D-channel (channel selection: All framed). In addition, the channel selection "All unframed" can be select: in which case the ARGUS will loop all B-channels, the D-channel and time slot 0.

The ARGUS will display the B-channel used and how long the loopbox has been activated (in h:min:sec).




Deactivate the loopbox.

3.14 Managing Multiple Tests on a PRI Access

The ARGUS can simultaneously start several tests or “connections” independently of each other. As an example, a BERT can be run at the same time that you make a phone call. The individual tests or “connections” use resources.


All of the tests that have been started will be administered by the Test Manager. Using the Test Manager, you can start new tests, switch between tests running in parallel or terminate all of the tests that are currently running.

Test Manager

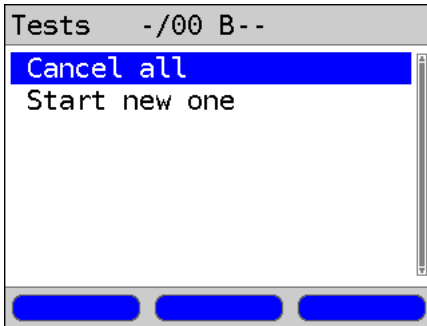


The ARGUS – Main menu

Open the Test Manager


<TM> Opens the Test Manager directly
or
 Opens the Test Manager directly in the Single tests menu if a connection has already been setup or if the ARGUS is running a test.

3.14.1 Starting Several Tests to Run Simultaneously

Starting a new test or connection during an existing connection

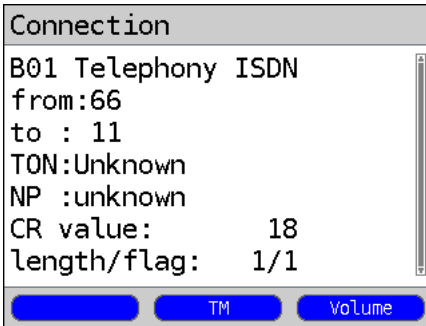


Example:
There is a connection on B-channel 1.



Open the Test Manager (can also be opened by pressing the "6" on the keypad).



Select desired test
(e.g. bit error rate test, BERT)

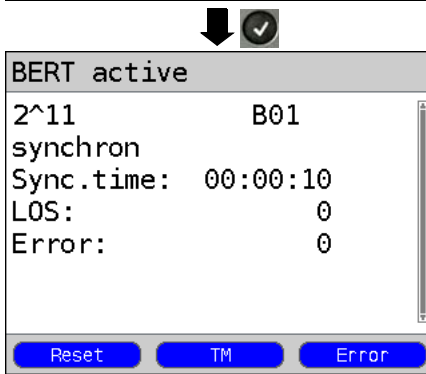

Start BERT, the connection is not yet setup.


For information on running a BERT, see page 20



Open the Test Manager.
Mark "Outgoing connection"



An example of the display

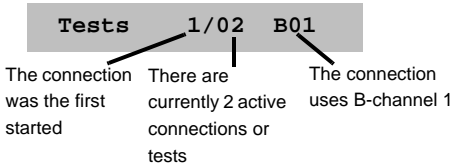

If a test (or connection) is canceled or cleared, the ARGUS will return to the Test Manager if there is another test (or connection) running in the background.




Some tests use so many resources that they cannot be run in every combination with other tests. In this case, the ARGUS will display the message "Test not possible at this time".

Test/ Connection display.	Number of times that a test or connection can be started at the same time	Switching to another test is possible
Incoming call	30	Yes
Outgoing call	30	Yes
BERT	2	Yes
Loop	2	Yes
Service tests	1	No
Suppl.serv.test	1	No
Time measurement	1	No
CF Interrogation / Active / Clear	1	No

3.14.2 Switching between Parallel Tests or Connections

This operation will be illustrated using the example of "Accepting an incoming call during a BERT".


The ARGUS signals an incoming call both audibly and on the display (see page 37). The incoming call can be accepted without influencing the currently running BERT. If either the "B-channel loop" or the "BERT wait" function is active, the call will be accepted automatically.

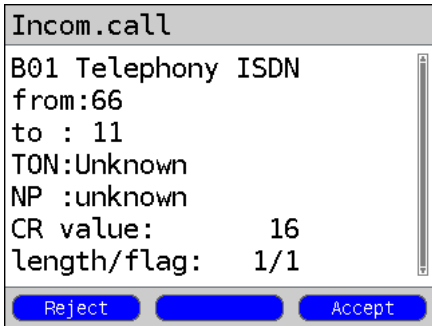


BERT is running.

While running a BERT, the ARGUS displays information about an incoming call.

<Reject> Reject the incoming call. The ARGUS will open the BERT display.

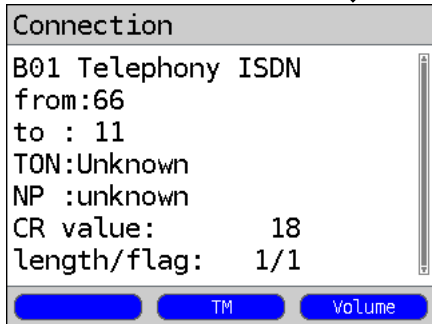

Accept the call. The BERT will continue in the background.



Mark "BERT outgoing".

Switch to BERT.




The connection remains active in the background, the handset is assigned to the connection.



The handset will be assigned to the currently active connection. The assignment of the handset to a given connection is also retained in the background.

3.14.3 End All Currently Running Tests or Connections

The ARGUS - Main menu

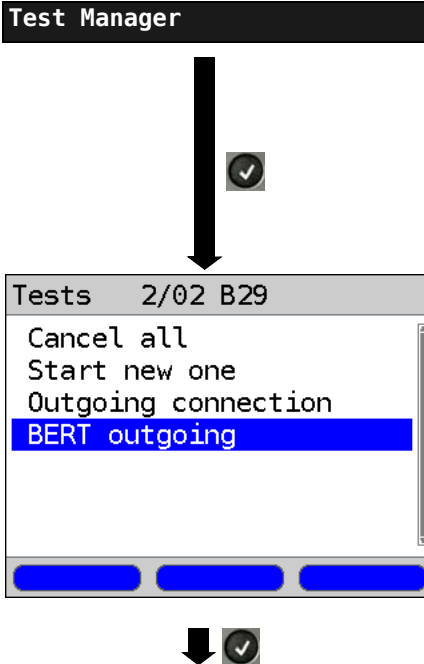

Open the Test Manager

<TM> Opens the Test Manager directly
or
in the Single tests menu if a
connection has already been
setup or if the ARGUS is running
a test.



4 Appendix

A) Acronyms

A

A3k1H	Audio 3.1 kHz
A7kHz	Audio 7 kHz
A-Bit	Alarm Bit
AIS	Alarm Indication Signal
AMP	Argus measurement report
AS	Available Second
ASCII	American Standard Code for Information Interchange.
Avg	Average

B

BC	Bearer Capability
BERT	Bit Error Rate Test
BRI	Basic Rate Interface (in Germany the S ₀ interface)

C

CDN	see also CDPN
CDPN	Called Party Number
CF	Call Forwarding
CFB	Call Forwarding Busy
CFNR	Call Forwarding No Reply
CFU	Call Forwarding Unconditional
CONN	CONNect Message
CRC	Cyclic Redundancy Check
CUG	Closed User Group

D

D-Bit	Data Bit
dB	Decibel
DCE	Data Communication Equipment
DDI	Direct Dialling In (dialling in to an extension directly)
DE	German
UDI	Unrestricted Digital Information (data telecommunications)
UDI-TA	Unrestricted Digital Information with Tones & Announcements
DIN	Deutsches Institut für Normung e. V.
DM	Supplementary services (Dienstmerkmal)
DSS1	Digital Subscriber Signalling System No. 1
DTE	Data Terminal Equipment
DTMF	Dual Tone Multi Frequency

E	
E1	Primary Rate Interface (PRI)
E-Bit	Error-Bit
Ecnt	E-Bit Counter
EFS	Error Free Seconds
ES	Errored Seconds
F	
FAS	Frame Alignment Signal
Fax G3	Fax Group 3
Fax G4	Fax Group 4
G	
GmbH	German Limited Liability Company
H	
HDB3	High Density Bipolar of order 3
HDLC	High-Level Data Link Control
HEX	Hexadecimal value
HLC	High Layer Compatibility
HRX value	Hypothetical reference connection
HTTP	Hyper-Text Transfer Protocol
HVT	Main distribution frame (MDF)
I	
ITU	International Telecommunication Union
K	
kHz	Kilohertz
L	
L1	Layer 1 in the OSI reference model
L2	Layer 2 in the OSI reference model
L3	Layer 3 in the OSI reference model
LCN	Logical Channel Number
LED	Light-Emitting Diode
LEPM	Line End for Primary Multiplex (Rate Interface)
LLC	Low Layer Compatibility
LOS	Loss of synchronisation
M	
m	Meter
MegaBERT	Mega Bit Error Rate Test
MSN	Multiple Subscriber Number
N	
NGN	Next Generation Network
NP	Numbering Plan
NSAP	Network Service Access Point

NT	Network Termination
NTPM	Network Termination Primary Multiplex
O	
OSI	Open Systems Interconnection
P	
PC	Personal Computer
P-P	Point-to-point
PRI	Primary Rate Interface (German S _{2M} interface)
PSI	Program Specific Information
PWR	Power
Q	
QRSS	Quasi Random Signal Sequence
R	
Rx	Receive
S	
BRI S/T	Basic Rate Interface (access on a S/T bus)
PRI	Primary Rate Interface (PRI access)
Sa	Vertical transmission channels
SES	Severely Errored Second
Spch	Speech
T	
TE	Terminal Equipment
TEI	Terminal Endpoint Identifier
Tel31	Telephony 3.1 kHz
Tel7k	Telephony 7 kHz
TM	
TM	Test Manager
TON	Type of Number
TTX	Teletext
Tx	Transmit
U	
U_{2an}	U ₂ Interface
U-interface	Basic Rate Interface (U-Interface access)
US	Unavailable Second
UUI	User-User-Info (UUI)
V	
ViSyB	Video Syntax Based
ViTel	Video-Telephony
X	
X.25	ITU-T X.25 Protocol Standard
X.31	ITU-T X.31 Protocol Standard

B) Index

Numerics

7 kHz Telephony28

A

A-Bit10, 15, 47
Access7
Access Mode8
Access number13, 39
Acronyms64
Advice of Charges (AOC)39
AIS47
Alarm21
a-law16
Alerting mode13, 42
Appendix64
ARGUS State display9, 11
AS23
ASCII31
Attendant26
Audio 3.1 kHz28, 37
Audio 7 kHz28, 37

B

B-channel loop26
B-channel Test10
BERT18, 56
BERT characteristic values23
BERT HRX value19
BERT results22
BERT Settings19
BERT start20
BERT time19, 55
BERT wait18, 25
BERT-saving24
Bit error rate22, 56
Bit error rate test17, 26, 52
Bit error rate test, error level settings56
Bit errors21
Bit pattern18, 20, 25, 26, 54, 55, 57
Bit pattern PRI19
BRI/PRI/E18
Bus configuration11

C

Cable attenuation14
Call acceptance16, 26, 42
Call Forwarding37
Call numbers38, 45
Call parameter16

Caller's number	39
Causes	43
Charge information in NT mode:	42
Clear mode	17
Clear text	43
Clearing down	43
Clock generation	13, 52
Clock mode	13
Coaxial cable	14
Connection display	37, 38
Connection setup time	45
Constant alarm	21
Contact	6
CRC4	47, 48
CRC4 mode	15
CRC4 monitoring	10, 11, 15, 47

D

D bit	31
Data throughput	17
Data transferred	22
Date	24
D-channel protocol	11
DDI	16
Default	12, 18
Dial tone	39
Direct Dialling In (Extension)	13, 39
Display Information	39
Display of charges	39
Display of the B-channels on a PRI access	11
Displaying Advice of Charges (AOC)	39
Displays	47
Code Err	48
Code HDB3	47
Code rel	48
CRC Err	48
CRC rel	48
CRC4 det	47
E-Bit	47
Ecnt	48
FAS	47
Frm. Err	48
noA-Bit	47
noAIS	47
Sa5-Bit (Rx,Tx)	47
Sa6-Bit (Rx,Tx)	47
Signal	47
DM	23
DSS1	27
DTMF signal	37

Duration	46, 49
----------------	--------

E

E-Bit	47
Echo canceler	17
EFS	23
En-bloc sending	38, 40
Enter own number	20, 38, 39, 42
Error Code	28
Error level	19, 56
Error Messages	27
Error rate	17, 20
Error symbol	46
ES	23

F

FAS	10, 47
Fax Group 4	28, 37
Functions	6

H

Handset	37, 49
HDB3	48
HDLC frames	52
Headset	37
Hexadecimal	16
History function	46, 51
History symbol	46
HRX	22, 23
HRX value	19, 56

I

Impedance	14
Incoming Call	42
Info element	16
Insert bit errors	54
Interchannel delay	45
Introduction	5

K

Keypad dial	38
-------------------	----

L

L1 state	48, 51
Language	28, 37
Layer 1 alarm	46, 51
Layer 1 status	46
LCN	30
Leased line	48, 52
BERT - Configuration	55
Bit error rate test	53
Loopbox	58
Telephony	52
List of Services	28

Listening-in	49
Long haul	14
Loop	26
Loopbox	18, 20, 26
LOS	23, 54
LOS counter	20
LOS time	22

M

Managing multiple tests	46
Master	13
Measurement time	17, 19
MegaBERT	48, 53, 56
Memory location	24
Microphone	37
Mixed Mode	28, 37
Monitor	49
Multiple tests	59

N

Negotiation of the data packet size	30
Negotiation of the window size	30
Next Generation Network	17
NT Simulation	10
Numbering Plan	16, 39
Numbers	24, 39

O

OK symbol	46
Options	1
OSI	28, 37
Overlap sending	38

P

Packet number	30
Packet size	30
Parallel Call	50
Pin assignment	7, 46
Precision	17
PRI haul mode	14
PRI Monitor	51
PRI relay	46
PRI termination	14
Protocol	13
Protocol recognition	10, 13

Q

Quit all the currently running tests.	63
--	----

R

Receiver inset	37
Redial	38, 41
Reference connection	19, 22, 23, 56
Remote number	20

RFC 4040	17
Rights	2
Ringling tone	13

S

Sa5 bits	14, 47
Sa6 bits	15, 47
Self call	17, 18, 20, 27
Service tests	28
Services	16, 28
SES	23
Setting the BERT Parameters	18
Setting the PRI Parameters	12
Setup the connection	37, 38
Short haul	14
Simplified overlap sending	39
Slave	13
Speed-dialing memory	16, 20, 24, 27, 38, 40, 42, 45
Starting Several Tests to Run Simultaneously	60
Subaddress	16, 39
Supp.Serv.test	27, 28
Supplementary Service Test - Error Messages	27
Supplementary Services	27
Supplementary Services Test	27
Switch pin assignment	9
Switching between Parallel Tests	62
Synchronicity	54
Synchronisation loss	20, 22, 54

T

TE Simulation	10
TEI	30
Telefax Groups 2/3	28, 37
Telephone connections	37
Telephone key	39
Telephony	28, 37
Teletex	37
Telex	28, 37
Termination resistor	14
Test Manager	21, 25, 26, 38, 39, 40, 41, 42, 43, 46, 53, 54, 59
Test time	21, 54
The availability of the B-channels	11
The extension module's initialization phase	10
The number of bit errors	22
Threshold	19
Time	24
Time measuring	45
Time stamp	50
Transmission code	47
Transmission quality	17
Type of access	8

Type of number	16, 39
----------------------	--------

U

Units for charges	39
Unrestricted Digital Information (data telecommunications)	28, 37
Unrestricted Digital Information with Tones & Announcements	28, 37
US	23
USB interface	49
User data	31
User-specific services	16, 28
User-to-User Information	39
UUI (User User Info)	16

V

Video Telephony	28, 37
Videotex	28, 37
Voice coding	16
Volume	38, 39, 40, 41, 42, 43, 53

W

WINanalyse	49
Window size	30
WINplus	49
Wires	46

X

X.25	33
X.31	
Facilities	32
Profile name	32
Test results	34
Throughput	30
Throughput agreed	30
X.31 parameters	29
X.31 profile	29, 30
X.31 Test	29
X.31 test	
automatically	33
manual	35

Z

μ-Law	16
-------------	----