

FTB-LTC/PSB/SPSB

NETWORK TESTING—OPTICAL

- Installation/troubleshooting/OTDR testing essential: covers the OTDR's dead zone, enabling loss measurement on the first and last connections of a fiber under test
- Increase the life of the OTDR connector by reducing the number of matings on the OTDR connector
- Singlemode and multimode fiber models
- Wide selection of connectors for quick connection to most OTDR and patch panel ports
- Modular FTB-LTC, portable SPSB and stand-alone PSB: available in lengths of 150, 300, 500, 1000 and 2200 m

Platform Compatibility (FTB-LTC)

- FTB-200 Compact Platform
- FTB-500 Platform




Choice of Configurations

Typically, the length of an OTDR's dead zone is equivalent to that of the optical pulse plus a few meters. The chosen launch test cable should therefore be longer than the pulse dead zone used for the tests. For instance, a 1 μ s pulse is approximately 100 m long; selecting a 150 m SPSB or a 300 m LTC/PSB would therefore be appropriate.

EXFO offers three types of launch cables:

- The FTB-LTC module combines with an FTB-7000 series OTDR module in the FTB-500 or FTB-200 platform
- The stand-alone PSB comes in a rugged, compact carrying case
- The portable SPSB comes in a soft, easy-to-carry-everywhere pouch

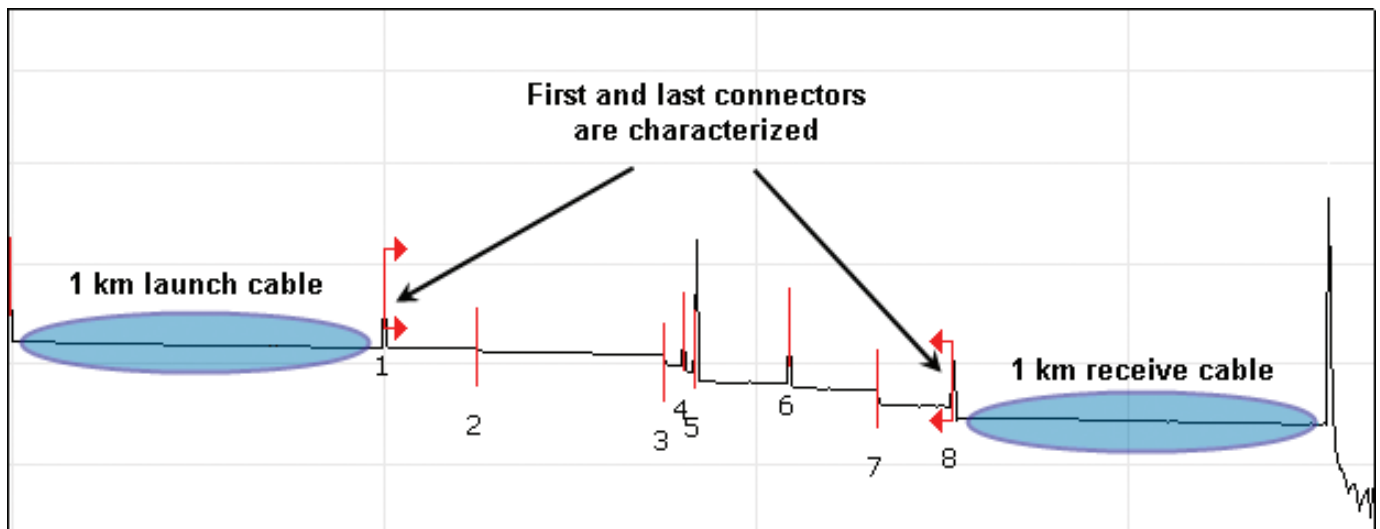

■ OTDR trace with launch and receive cables, characterizing the first and last connectors of the link.

How It Works

Link characterization is often performed using an OTDR. But even though an OTDR has the shortest dead zones, because of the way loss is measured in a link, it does not allow the characterization of the first and last connectors without using a launch test cable, also called a *pulse suppressor box*. Here's why.

The loss value associated with an event is the difference between the backscattering levels measured before and after the event. To account for the OTDR's dead zone, obtaining a backscattering level before the first connector requires inserting a certain length of fiber between the OTDR port and the first connector of the fiber under test. At the other end of the link, the same length of fiber is added after the last connector of the "receive" cable.

In order to obtain an accurate, complete picture of the system's loss—which is a critical aspect of fiber commissioning—a launch test cable should always be used at both ends of the fiber link.

SPECIFICATIONS

Model	FTB-LTC/PSB/SPSB	
Connector insertion loss (dB) ^a	< 0.5	
Connector reflectance (dB) ^b	UPC: < -50 APC: < -60	
Fiber type	Wavelength	Typical attenuation
Multimode fiber 50/125 μm (OM2)	850 nm	3.0 dB/km
	1300 nm	1.2 dB/km
Multimode fiber 62.5/125 μm (OM1)	850 nm	3.2 dB/km
	1300 nm	1.0 dB/km
Singlemode fiber 9/125 μm (G.652D)	1310 nm	0.37 dB/km
	1550 nm	0.25 dB/km

GENERAL SPECIFICATIONS

	FTB-LTC	PSB	SPSB
Size (H x W x D)	96 mm x 25 mm x 285 mm (3 3/4 in x 1 in x 11 1/4 in)	114 mm x 235 mm x 197 mm (4 1/2 in x 9 1/4 in x 7 3/4 in)	25 mm x 269 mm x 146 mm (1 in x 10 5/8 in x 5 3/4 in)
Weight	325 g (0.72 lb)	2.72 kg (6 lb)	1.36 kg (3 lb)
External patchcord length	2 x 1.5 m (2 x 5 ft)	2 x 2 m (2 x 6.6 ft)	2 x 2 m (2 x 6.6 ft)

Notes

- a. Bidirectional OTDR, singlemode 1310 nm and 1550 nm, multimode 850 nm and 1300 nm.
b. Singlemode bidirectional OTDR 1310 nm and 1550 nm.

ORDERING INFORMATION

FTB-LTC-X-XX-XX-XX

■ **Models**

■ **Singlemode**

- FTB-LTC-B-300 = Launch test cable, single module for FTB platform, singlemode fiber 9/125, 300 m
- FTB-LTC-B-500 = Launch test cable, single module for FTB platform, singlemode fiber 9/125, 500 m
- FTB-LTC-B-1000 = Launch test cable, single module for FTB platform, singlemode fiber 9/125, 1000 m

■ **Multimode**

- FTB-LTC-C-300 = Launch test cable, single module for FTB platform, multimode fiber 50/125, 300 m
- FTB-LTC-D-300 = Launch test cable, single module for FTB platform, multimode fiber 62.5/125, 300 m

Example: FTB-LTC-B-300-58-58

■ **Connectors**

■ **For singlemode models -B, the following connectors are available:**

- 58 = FC/APC narrow key
- 88 = SC/APC narrow key
- 89 = FC/UPC
- 90 = ST/UPC
- 91 = SC/UPC
- 95 = E2000/UPC
- 96 = E2000/APC
- 101 = LC/UPC ^a
- 104 = LC/APC ^a

■ **For multimode models -C/-D, the following connectors are available:**

- 50 = FC/PC
- 54 = SC/PC
- 74 = ST/PC
- 98 = LC/PC ^a

PSB-XXX-XX-XX

■ **Model**

- PSB-B-500 = Stand-alone pulse suppressor box, singlemode fiber 9/125, 500 m
- PSB-B-2200 = Stand-alone pulse suppressor box, singlemode fiber 9/125, 2200 m
- PSB-C-300 = Stand-alone pulse suppressor box, multimode fiber 50/125, 300 m
- PSB-D-300 = Stand-alone pulse suppressor box, multimode fiber 62.5/125, 300 m

Example: PSB-B-500-58-91

■ **Connectors**

■ **For singlemode models -B, the following connectors are available:**

- 58 = FC/APC narrow key
- 88 = SC/APC narrow key
- 89 = FC/UPC
- 90 = ST/UPC
- 91 = SC/UPC
- 95 = E2000/UPC
- 96 = E2000/APC
- 101 = LC/UPC ^a
- 104 = LC/APC ^a

■ **For multimode models -C/-D, the following connectors are available:**

- 50 = FC/PC
- 54 = SC/PC
- 74 = ST/PC
- 98 = LC/PC ^a

SPSB-XXX-XX-XX

■ **Model**

- SPSB-B-150 = Soft pulse suppressor bag, singlemode fiber 9/125, 150 m
- SPSB-B-500 = Soft pulse suppressor bag, singlemode fiber 9/125, 500 m
- SPSB-C-300 = Soft pulse suppressor bag, multimode fiber 50/125, 300 m
- SPSB-D-300 = Soft pulse suppressor bag, multimode fiber 62.5/125, 300 m

Example: SPSB-B-500-58-101

■ **Connectors**

■ **For singlemode models -B, the following connectors are available:**

- 58 = FC/APC narrow key
- 88 = SC/APC narrow key
- 89 = FC/UPC
- 90 = ST/UPC
- 91 = SC/UPC
- 95 = E2000/UPC
- 96 = E2000/APC
- 101 = LC/UPC ^a
- 104 = LC/APC ^a

■ **For multimode models -C/-D, the following connectors are available:**

- 50 = FC/PC
- 54 = SC/PC
- 74 = ST/PC
- 98 = LC/PC ^a

Note

a. LC connectors are not available for first connector.

EXFO Corporate Headquarters > 400 Godin Avenue, Quebec City (Quebec) G1M 2K2 CANADA | Tel.: +1 418 683-0211 | Fax: +1 418 683-2170 | info@EXFO.com

Toll-free: +1 800 663-3936 (USA and Canada) | www.EXFO.com

EXFO America	3400 Waterview Parkway, Suite 100	Richardson, TX 75080 USA	Tel.: +1 972 761-9271	Fax: +1 972 761-9067
EXFO Asia	100 Beach Road, #22-01/03 Shaw Tower	SINGAPORE 189702	Tel.: +65 6333 8241	Fax: +65 6333 8242
EXFO China	36 North, 3 rd Ring Road East, Dongcheng District Room 1207, Tower C, Global Trade Center	Beijing 100013 P. R. CHINA	Tel.: +86 10 5825 7755	Fax: +86 10 5825 7722
EXFO Europe	Omega Enterprise Park, Electron Way	Chandlers Ford, Hampshire S053 4SE ENGLAND	Tel.: +44 23 8024 6810	Fax: +44 23 8024 6801
EXFO NetHawk	Elektronikkatie 2	FI-90590 Oulu, FINLAND	Tel.: +358 (0)403 010 300	Fax: +358 (0)8 564 5203
EXFO Service Assurance	270 Billerica Road	Chelmsford, MA 01824 USA	Tel.: +1 978 367-5600	Fax: +1 978 367-5700

EXFO is certified ISO 9001 and attests to the quality of these products. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. EXFO has made every effort to ensure that the information contained in this specification sheet is accurate. However, we accept no responsibility for any errors or omissions, and we reserve the right to modify design, characteristics and products at any time without obligation. Units of measurement in this document conform to SI standards and practices. In addition, all of EXFO's manufactured products are compliant with the European Union's WEEE directive. For more information, please visit www.EXFO.com/recycle. Contact EXFO for prices and availability or to obtain the phone number of your local EXFO distributor.

For the most recent version of this spec sheet, please go to the EXFO website at <http://www.EXFO.com/specs>

In case of discrepancy, the Web version takes precedence over any printed literature.